

Share your best tips, tricks and thoughts with our Haakaa Community.



haakaa® IS A REGISTERED TRADEMARK OF THINK GREEN LIMITED NEW ZEALAND.
63 Riverland Road, Kumeu, Auckland.
Made in China.
For more information, please visit:
www.haakaa.co.nz

120mm

haakaa®

Electric Nail Care Set

Safe for even the tiniest nails!



SGE004 E07374

120mm

Product Name: Electric Nail Care Set

Materials: Nail Trimmer - ABS, PP, GPPS
Trimmer Pads - ABS, Sanding Paper, Metal
Colours: Assorted/Meadow/Acorn

Contents: 1 x Electric Nail Trimmer Body - 131 x 42 x 31mm
5 x Nail Trimmer Pads - 19 x 19 x 21mm
1 x Nail Trimmer Cone - 10 x 10 x 30mm
1 x Storage Case - 155 x 86 x 53mm
*Requires 2 x AA batteries (not included)



Product Description

The Haakaa Electric Nail Care Set lets you safely trim down your baby's nails without the need for sharp scissors or clippers! This little gadget eliminates the risk of nicking your child's skin, turning those scary nail trimming sessions into quality bonding time. It has a pressure-activated arrest system, so is safe for even the tiniest nails.

Our Electric Nail Care Set has two rotation directions and speeds to suit your needs. It's whisper-quiet and features a light at the front for easy nighttime filing!

Simply attach the trimmer pad suitable for your child's age and gradually file down their nails! The trimmer pads make your baby's nails smooth and don't leave sharp edges that may scratch their delicate skin. We've also included a metal pad and cone so parents can file down their nails too!

1

2


Features

- Pressure-activated arrest system to prevent injury.
- Easy-to-use, one-button operation with two rotation directions and speeds.
- Whisper-quiet with a soft LED light at the front for discreet nighttime trimming.
- Ergonomic design is comfortable to hold.
- Includes a range of high-quality filing pads suitable from newborn to adult.
- Portable, neatly-organised storage case with convenient age guide.

Cleaning and Care

Ensure the nail trimmer is switched off before cleaning. Please do not use abrasive cleaners, thinners or solvents on any part of this Electric Nail Care Set. Do not submerge. To clean your trimmer parts, wipe gently with a dry, soft cloth or cotton swab. Avoid using any heating method to sterilise the product as it can cause damage. Keep in a cool, dry place and avoid direct sunlight.

Nail Trimmer Pad Set

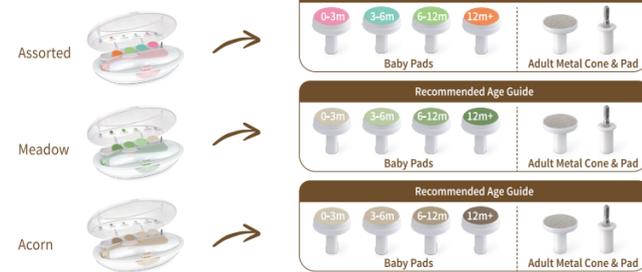

Case contains convenient age guide so you always know which pad to use!


PLEASE NOTE: Trimmer pad age suggestions are guides only. Trimmer pads of different strengths can be used to suit your child's needs. These attachments are also suitable for adults.

Replacement Parts

As your trimmer pads wear down from use, they will need to be replaced. All replacement pads are available through www.haakaa.co.nz or your nearest Haakaa stockist.

3

Electric Nail Trimmer

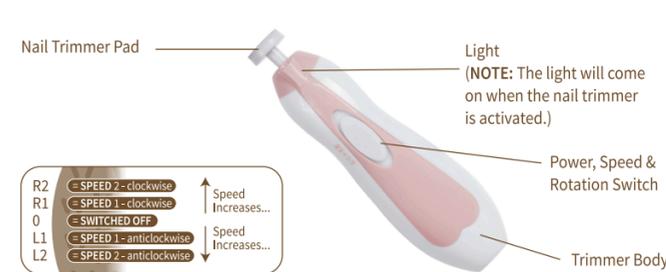

⚠ For your child's safety BEFORE USE

Ensure you read all instructions carefully and retain them for future reference. This product is for nail care only and is to be operated by an adult at all times or under strict adult supervision.

4

Assembly Instructions



Hold the body of the trimmer tightly and slide off the battery cover in the direction of the arrow.

Place 2 x AA batteries inside the trimmer. Ensure battery terminals are correctly aligned.

Once the batteries are in place, slide the battery cover back onto the trimmer. The battery cover is secure when you hear a "click".

NOTE: If you notice the rotation speed decreasing or the light dimming, please replace the batteries. Make sure the switch is in the OFF position before changing batteries. Remove batteries if not in use for an extended period.

5

How to Use Your Electric Nail Trimmer



Choose pad most suitable for your child and push securely in place.

Hold your child's hand out straight with fingers spread. Hold trimmer away from your child and turn on power switch.

Holding trimmer body firmly, start on the slowest speed and begin filing nails. Adjust speed as required.

Avoid placing trimmer pad directly onto skin.

6

...continued



To avoid injury, switch trimmer off between nails and ensure your child is comfortable.



Once done, clean trimmer pad with a dry cloth and wash your child's hands.



To remove trimmer pad, pull firmly out of the socket.



Store all parts in the storage case.

NOTE: Don't hold the spinning trimmer pad in one spot for extended periods. Damage and heat (from friction) may occur.

7

Caution

- Keep this product and all of its parts out of reach of children. Small parts are a choking hazard and could result in injury or death.
- Check product condition regularly. Discontinue use at first signs of damage.
- Do not place the spinning trimmer pad directly onto skin.
- Turn this product off when not in use. Do not leave product unattended while in use.
- Do not use this product for anything other than its intended use.
- Not to be used on animals.
- Do not stop the rotating part of the trimmer with excessive force. If the trimmer body becomes hot or starts to smoke, turn off immediately and contact Haakaa customer service.
- Store in a dry place and keep away from water. This product is not waterproof or water resistant.
- Keep all trimmer parts stored in the dedicated storage case to avoid accidental damage.
- Do not drop, forcefully throw, or shake the appliance at any time, as this may cause breakages or malfunctions.
- If any discomfort is felt during use, please check that all parts are attached correctly. If discomfort persists, discontinue use.
- We do not recommend using this product on weak, damaged, diseased or brittle nails.
- Please avoid using low-quality batteries and dispose of used batteries responsibly.

8

Troubleshooting

Problem	Possible Cause	Solution
Abnormal noise.	The trimmer pad is not installed correctly.	Remove trimmer pad and reinstall as per instructions.
The trimmer does not work.	Batteries or battery may be running low.	Replace batteries.
Poor nail filing results.	Incorrect speed or trimmer pad selected.	Increase the speed, or consider replacing the trimmer pad with one suitable for a higher age range.
The trimmer pad easily falls out.	The trimmer pad is not installed correctly.	Remove trimmer pad and reinstall as per instructions.

NOTE: If troubleshooting chart does not resolve your product issue, please discontinue use and contact your nearest Haakaa stockist. Do not attempt to modify, disassemble, or repair the product by yourself.

9

Warranty & Support

Warranty

This product is warranted for a period of one year from the date of purchase.

This warranty does not cover:

- Damage due to improper use, normal wear and tear, or defects that have a negligible effect on the value or operation of the appliance.
- The warranty becomes void if any unauthorised persons undertake repairs and if original Haakaa parts are not used.

Before making a return, please contact your local Haakaa retailer or customer service for advice on submitting a warranty claim.

Customer Service

For further assistance, please contact customerservice@haakaa.co.nz

10